

# Installing Cabbunk™ First Time

***Please read to the end before installing!***

1 Turn your cab seats to face the rear.



2 Slide the seats towards you.



3 Take the small pole over the headrests.



4 Pat the bunk down.




5 Slide the seats towards the windscreen.




6 Check height of large pole. Adjust by eye. Make sure it is level.



7 When you are happy with the level:  
Mark right-hand end of pole on wall.

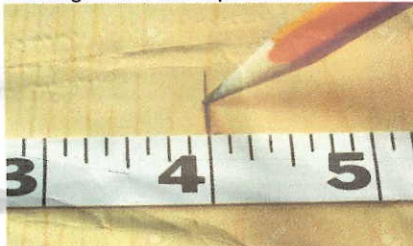

8 Fix RH bracket to wall using 3 screws  
close to the bulkhead ONLY FINGER TIGHT

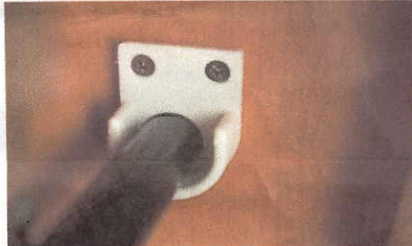

9 Use Measuring tape or spirit level to mark  
LH end of pole and fix other bracket.



10 Lock the large pole to length with the  
self-drilling screw provided.



With a Twin Cabbunk, Repeat for lower  
bunk, patting both bunks down.



The Twin Cabbunk fits in the same way.  
All in one pushed over the headrests.



**Cabbunk** Patent Pending®  
An extra child's bed in your motorhome